


COUNTING HEAD CENTER PLATE LEFT SIDE
(PHOTO / DIAGRAM # 12)

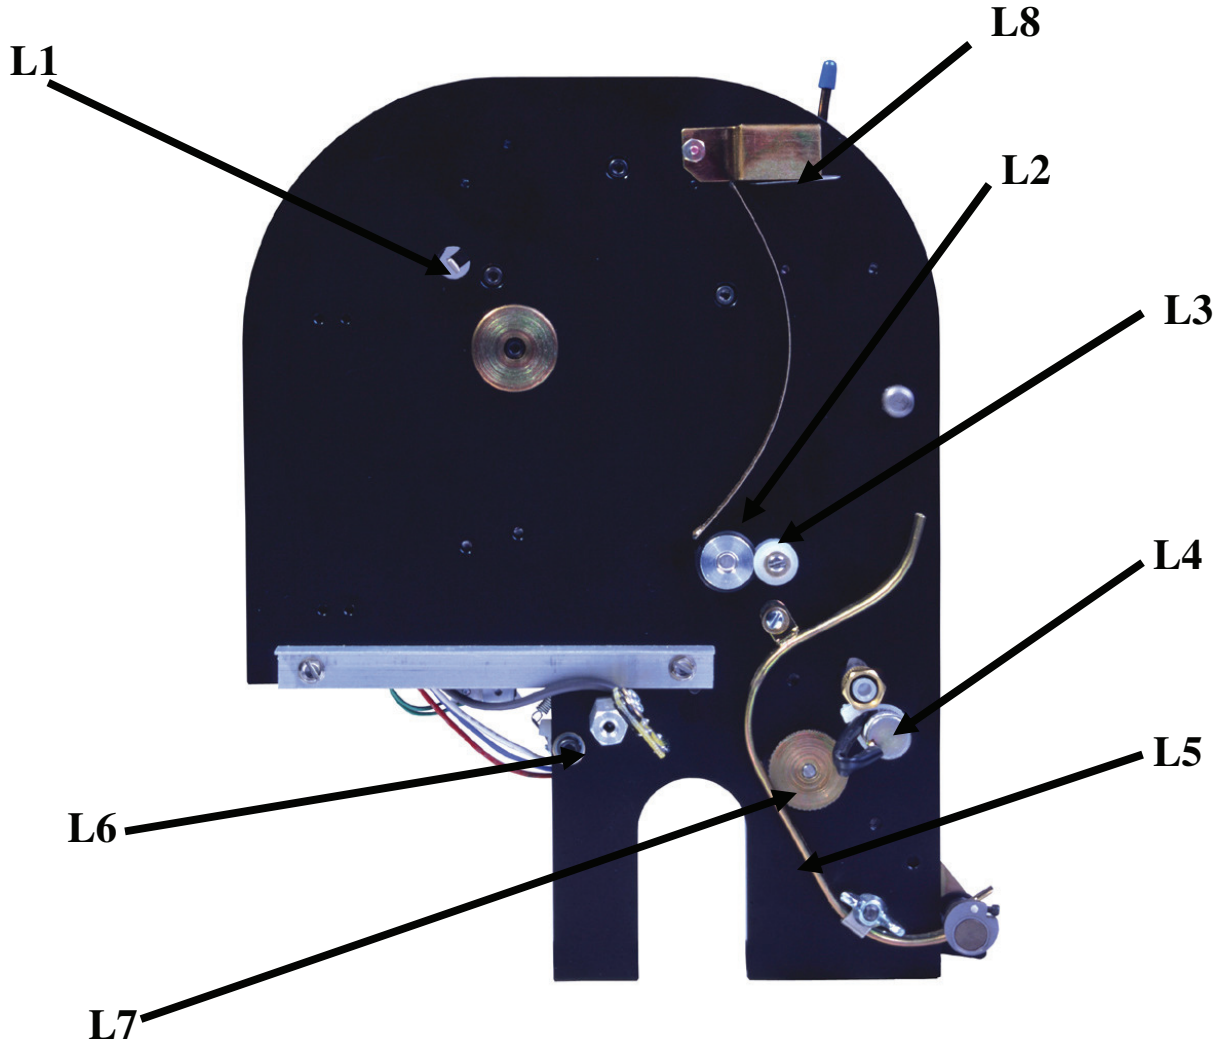

L1- Low Tape Actuator (S-3110)	L5- Tape Chute (S-6056-1)
L2- Looper Stop Spring Switch (S-6054)	6- Count Reed Switch (S-3108)
L3- Looper Follower (S-6050)	L7- Knurled Wheels (S6250-E, S-6021 .not shown)
L4- Tape Solenoid (S-3103)	L8- Looper Stop Actuator (S-3105-A)