



Looper drive wheels

Tape Chute Adjustment screw

Tape Solenoid

Small Knurled Wheel Aka Upper

When tape (tabbing material) is pushed through the tape chute it should just brush the lower (large) knurled wheel. If the tape is not brushing the lower wheel heel adjust the tape chute at the slotted screw below the looper drive wheels.

Large Knurled Wheel (aka Lower)